Eye wash diffuser kit for 25K/11K models


Part No. 01 02 075 12988

Hughes recommend replacing eye wash diffusers every 6 months to ensure correct functionality of the unit throughout its lifetime.

What's included in the kit:


- x10 aerated diffusers for eye wash (fig. 1)
- x5 aerated diffusers for hand held auxillary eye bath (fig. 2)
- Diffuser key for ease of replacement



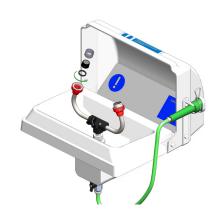

Specifications

MATERIALS			
EYE WASH DIFFUSERS	Rubber seal Plastic diffuser body Stainless steel filter Chrome plated brass retaining ring		
COMPATIBLE WITH THE FOLLOWING MODELS	Eyewashes: STD-25G STD-25G(S)/P STD-H-25G(S)/P	Tank Showers: EXP-J-14K(S)/350 EXP-J-14K(S)/1500 EXP-MH-14K(S)/350 EXP-MH-14K(S)/1500	Combination Showers: STD-MH-15K(S)/11KS STD-MH-5K(S)/11KS

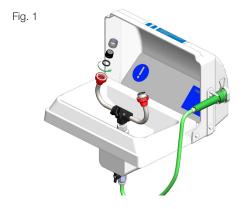

Replacing the eye wash diffusers:

- Remove the existing diffusers in an anti-clockwise direction
- Clean any dust or debris from the area
- Fit the new diffusers, taking care not to overtighten



Replacing the handheld eye bath diffusers:

- Unscrew the eye bath from handle in an anti-clockwise direction and remove the existing diffusers
- Clean any dust or debris from the area
- Fit the new diffusers and reassemble, taking care not to overtighten



www.hughes-safety.com